
ZEONE

Human Verified AI Gun Detection



ZEO Setup Guide



Let's Get Started

Step 1: Review Your Supplies

Before you begin your ZEO installation, ensure that you have received all the necessary components: Orin Device, two mounting brackets, and two power supply cables (to be attached together and then connected to the Orin device)

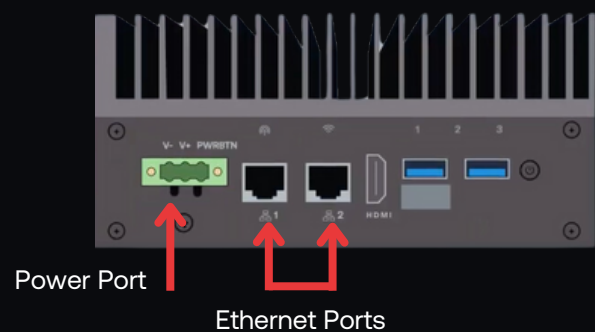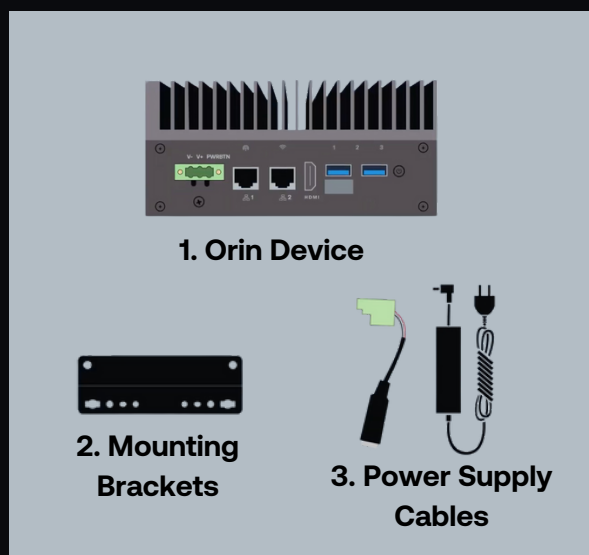


Step 2: Familiarize Yourself with the Orin Device Ports

On the client-facing side of the Orin device, you'll find:

- **1 Power Port** (green): Essential for powering the device.
- **2 Ethernet Ports:**
 - **Port 1:** For Internet connection.
 - **Port 2:** For the camera network.

Step 3: Set Up Power Supply

1. Locate an Uninterruptible Power Supply (UPS) in your server room. We recommend using a UPS instead of wall sockets.

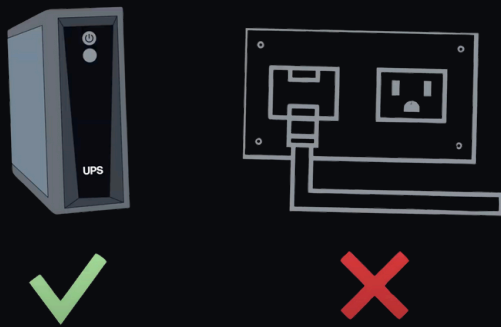

2. Connect the Power Cables:

- Attach the two power cables together.
- Plug combined power cable into the UPS.
- Connect the green side of the power cable to the green power port on the Orin device.



3. Verify the Connection:

Ensure the black wire of the cable is on the left, and the red wire is on the right.




Once connected, the power light on the Orin device should turn on and flash green, indicating the device is powered.

Step 4: Connect Ethernet Cables

1. Prepare Cat 5e Cables:

- Plug a Cat 5e cable into Port 1 for the Internet.
- Plug another Cat 5e cable into Port 2 for the Camera Network.
- Alternatively, you can use only Port 1 if you prefer to connect your Camera Network there.

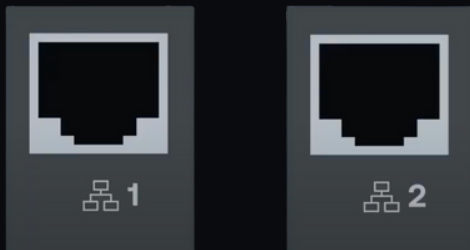

2. Check for Link Lights:


- Ensure both Ethernet cables have link lights on both ends, confirming a successful connection.



Step 5: Mount the Orin Device

1. Attach the Mounting Brackets:

- Identify the bottom of the Orin device by locating the 4 screws.
- Securely attach the mounting brackets to these screws.

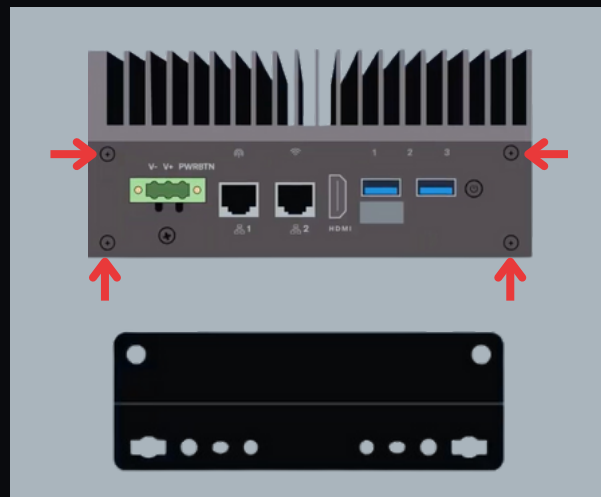

2. Mount the Orin Device:

- Choose a suitable orientation on your network rack (front or back).
- Attach the Orin device securely to the rack.

Double-check all connections: Power and Ethernet cables should be firmly in place. Ensure the Orin device is securely mounted to the network rack.

ZEONE

Human Verified AI Gun Detection

Your ZEO device is now fully set up.

You're protected by 24/7/365 gun
detection coverage with ZEO

[NEED ADDITIONAL HELP?](#)

Powered by
 ZEROEYES™

